


## RELAYS

19. Blower Motor Breaker (30 amp)
20. Cooling Fan Breaker (40 amp)
21. Low Beam Relay
22. High Beam Relay
23. Blower Motor 3rd Speed Relay
24. Blower Motor 4th Speed Relay
25. Interior Lamp Delay Unit
26. Cooling Fan Relay
27. Fan Fail Relay
28. AC Panel Illumination Resistor
29. Starter Relay
30. AC Panel Illumination Relay
31. LAMBDA Relay
32. Rear Defrost Timer
33. Main Relay
34. Accessory Relay
35. RPM Relay
36. Door Lock Breaker (25 amp)
37. Door Lock Module

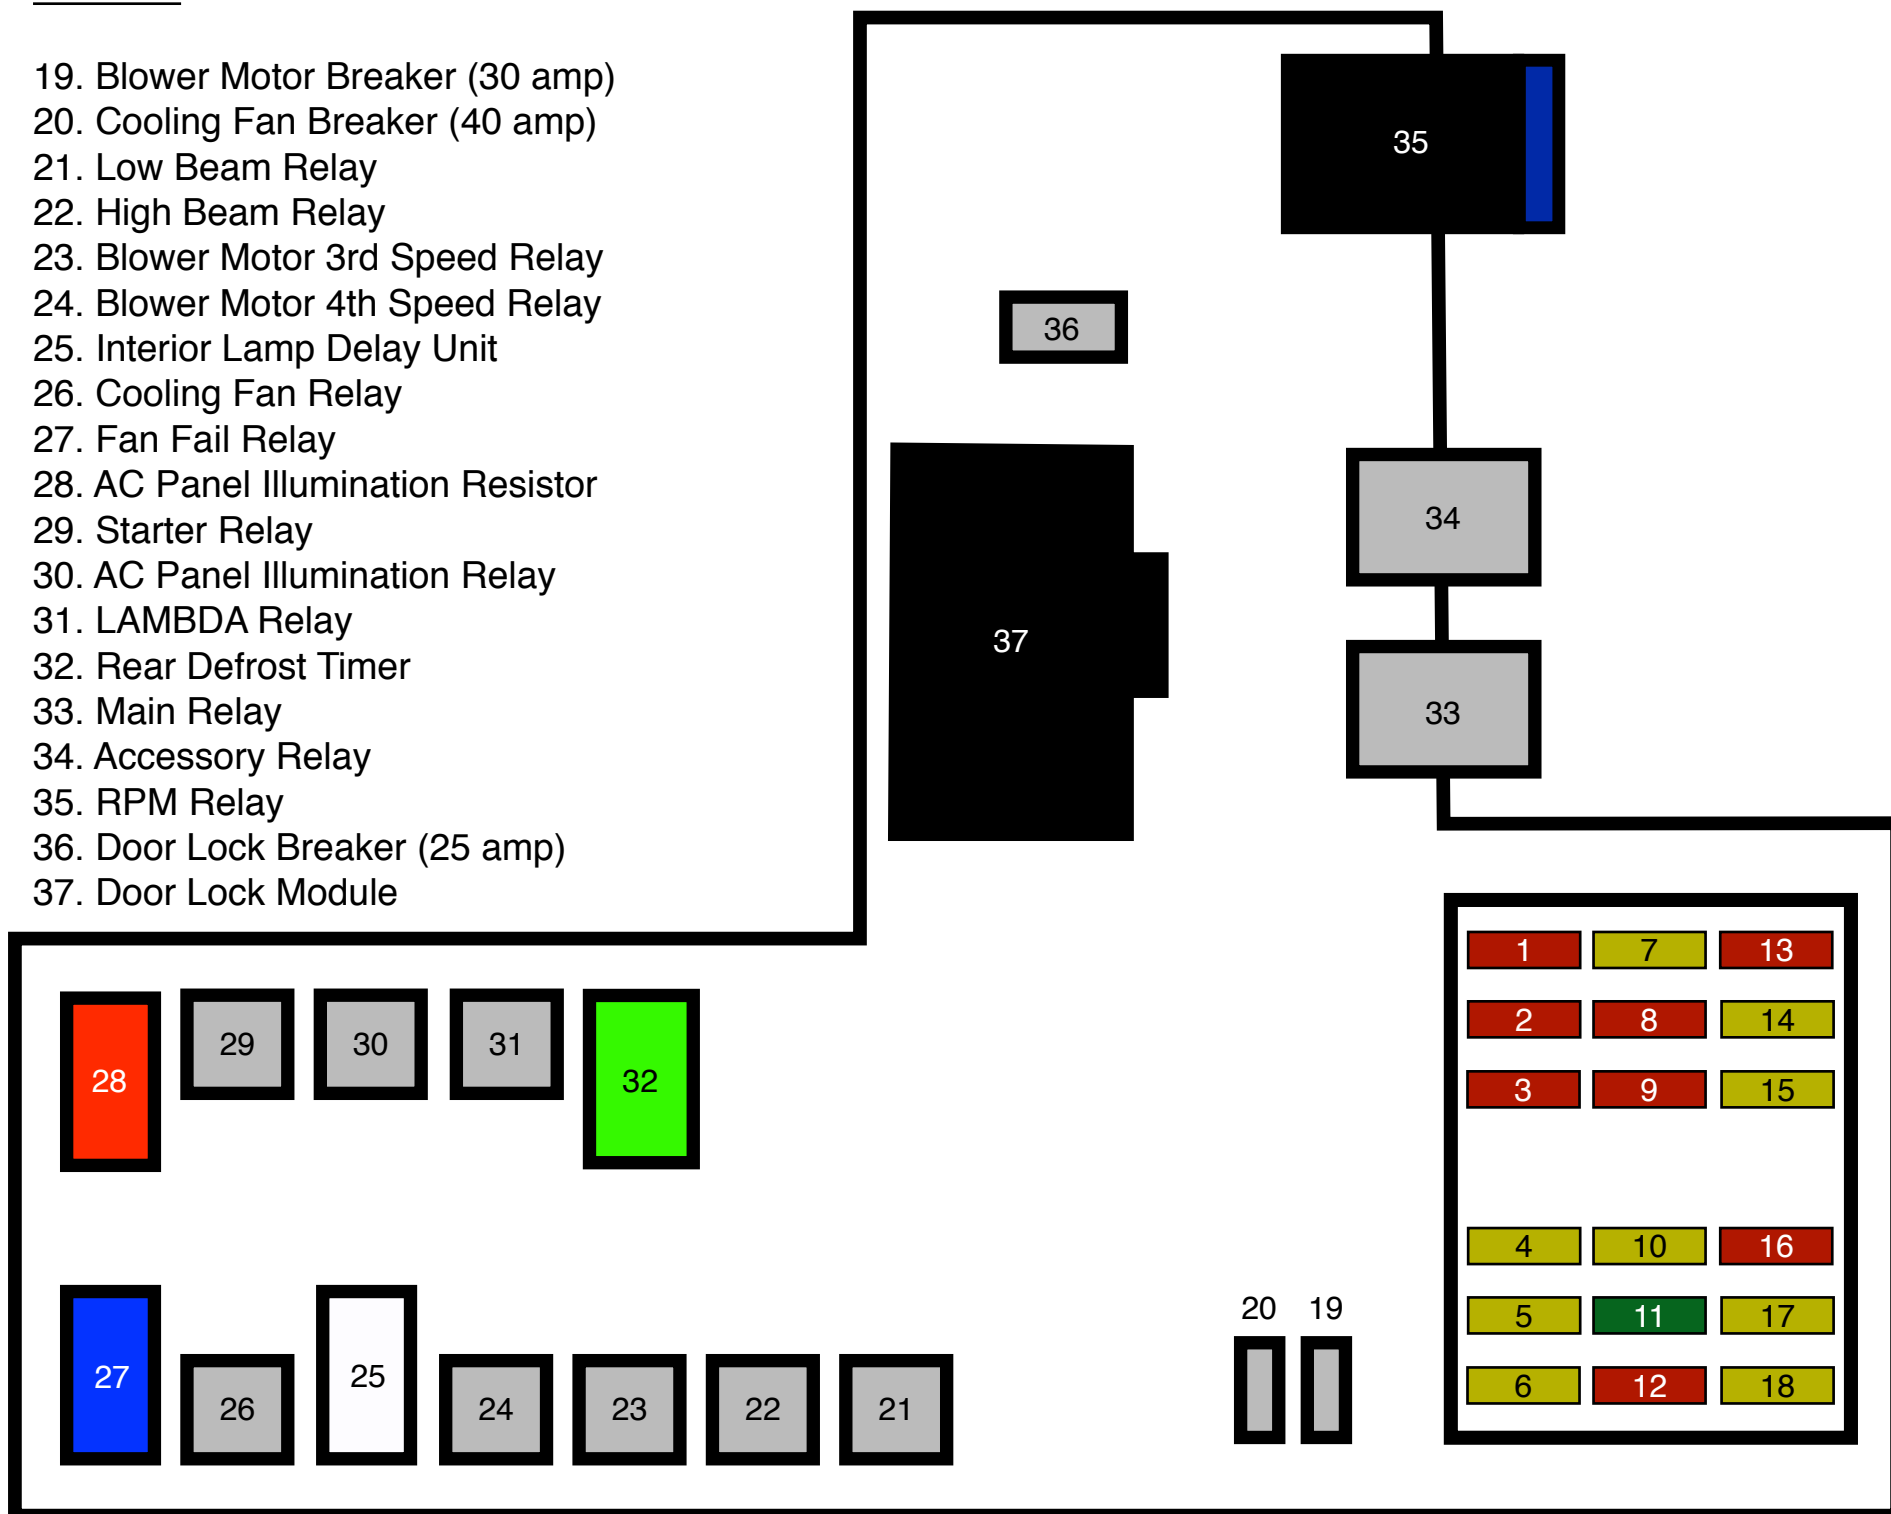

## FUSES

1. RPM Relay, Distributor, Vacuum Solenoid, Ignition ECU, Idle ECU
2. Driver-side Tail/Side/Parking/Tag Lamps
3. Windshield Wiper/Washer Motor
4. Turn Signal Indicator, Stop Light Switch
5. Dashboard Instruments/Indicators, Service Interval Counter
6. Hazard Warning Switch, Horns/Buzzer, Logic Box
7. LAMBDA Relay/ECU, Frequency Valve, Fuel Pump, Control Pressure Regulator
8. Passenger-side Tail/Side/Parking/Tag Lamps, Cigarette Lighter Lamp, Instrument Illumination Lamps, Main Light Switch Lamp, Digital Clock Lamp

9. Heated Rear Window, Power Mirrors
10. AC Mode Switch, Door Lock Warning Lamp
11. Radio Clock, Gear Selector Lamp, AC Panel Lamps, Power Windows
12. Diagnostic Plug, Engine Compartment Lamp, Glovebox Lamp, Door Lamps, Interior Lamps, Interior Delay Unit
13. Automatic Transmission
14. Low Beam Headlamps
16. High Beam Headlamps
16. Reverse Lamps
17. Cigarette Lighter, Clock
18. Brake Lamps

### Fuse Amperage:

