

KEY NO.	DESCRIPTION	LOCATION	KEY NO.	DESCRIPTION	LOCATION	KEY NO.	DESCRIPTION	LOCATION
1.	ALTERNATOR	5A	74.	WASH/WIPE SWITCH	9G	190.	FAN FAIL MODULE	9.5F
3.	BATTERY	6A	75.	POWER MIRROR SWITCH	9.5F	191.	FAN FAIL TELLTALE	10F
4.	IGNITION/START SWITCH	5.5C	77.	POWER WINDOW SWITCH LH	7.5E	192.	FAN FAIL TELLTALE	10F
5.	STARTER MOTOR	6B	78.	POWER WINDOW SWITCH RH	7.5F	193.	COOLING FAN THERMAL TRIP	8.5F
8.	HEADLAMP	1E	81.	DOOR LOCK SWITCH LH	10H	194.	COOLING FAN MOTOR	11F
11.	FRONT D.I./SIDE LAMP LH	1F	82.	DOOR LOCK SWITCH RH	10.5H	200.	AIR CONDITIONING COMPRESSOR	10H
12.	FRONT D.I./SIDE LAMP RH	1F	90.	AIR CONDITIONING MODE SWITCH	8.5H	201.	AIR CONDITIONING FAN MOTOR	9.5I
14.	INSTRUMENT PANEL ILLUMINATION LAMPS	2.5D	91.	LOW PRESSURE SWITCH	9.5H	202.	FAN SPEED THERMAL TRIP	8I
15.	LICENSE PLATE ILLUMINATION LAMPS	1J	92.	FAN SPEED SWITCH	8.5H	205.	JUMP START POST	5.5A
17.	REAR LAMP UNIT LH	1G	95.	STOP LAMP SWITCH	4.5H	215.	WIPER MOTOR	10.5G
18.	REAR LAMP UNIT RH	1H	100.	MAIN BEAM RELAY	4.5G	216.	WINDSHIELD WASHER PUMP	10G
19.	FRONT SIDE MARKER LAMP LH	1.5F	101.	DIP BEAM RELAY	4G	217.	INTERMITTENT WIPE CONTROL	9.5G
20.	FRONT SIDE MARKER LAMP RH	1.5G	102.	AUXILIARY RELAY	5.5D	230.	HORNS	3F
21.	REAR SIDE MARKER LAMP LH	1.5G	105.	START INHIBIT RELAY	9D	231.	REAR DEFOGGER	9E
22.	REAR SIDE MARKER LAMP RH	1.5I	106.	MAIN FUEL RELAY	9.5D	232.	MIRROR HEATER (IF FITTED)	10.5D
24.	RHEOSTAT	3E	107.	HOT START RELAY	10.5D	233.	WINDOW LIFT MOTOR	8.5E
25.	DIODE	3.5I	108.	IDLESPEED RELAY	8.5C	234.	DIGITAL CLOCK	7I
26.	ENGINE COMPARTMENT LAMP	2.5I	109.	R.P.M. RELAY	7.5D	236.	RADIO	7I
27.	ENGINE COMPARTMENT LAMP SWITCH	2I	112.	COOLING FAN RELAY	7.5F	239.	DOOR LOCK SOLENOID	11I
28.	LUGGAGE COMPARTMENT LAMP	2.5I	115.	DOOR LOCK RELAY	9J	242.	DOOR LOCK TELLTALE	8H
29.	LUGGAGE COMPARTMENT LAMP SWITCH	2.5J	120.	AIR CONDITIONING FAN 3RD SPEED RELAY	8.5I	243.	BUZZER LOGIC BOX	7C
30.	FRONT INTERIOR LAMP	3I	121.	AIR CONDITIONING FAN 4TH SPEED RELAY	8.5I	246.	MIRROR LH	11E
31.	REAR INTERIOR LAMP	4J	130.	LAMBDA ELECTRONIC CONTROL UNIT		249.	MIRROR RH	11F
32.	INTERIOR LAMP DELAY UNIT	4I	131.	LAMBDA PROBE	11A	250.	CIGAR LIGHTER	6I
34.	GLOVE COMPARTMENT LAMP	3I	132.	IGNITION CONTROL UNIT	11C	252.	FUSEBOX	5.5E
35.	GLOVE COMPARTMENT LAMP SWITCH	3I	133.	DISTRIBUTOR	10C	255.	TACHOMETER	3C
38.	RH DOOR LAMPS	4.5I	135.	COIL	10C	270.	SPEEDOMETER	2.5C
39.	LH DOOR LAMPS	5.5I	136.	SCREENED CABLE	11A	271.	VOLTMETER	2C
40.	RH DOOR SWITCH	4.5I	138.	FREQUENCY VALVE	10.5B	272.	OIL PRESSURE GAUGE	3.5C
41.	LH DOOR SWITCH	6.5I	142.	COLD START VALVE	8A	273.	TEMPERATURE GAUGE	2C
42.			144.	WARM UP REGULATOR	7.5B			
43.			145.	DOOR LOCK THERMAL TRIP	8J			
46.	GEAR SELECTOR ILLUMINATION	6.5G	146.	VACUUM SOLENOID	7.5C			
47.	CIGAR LIGHTER ILLUMINATION	6I	147.	THERMAL TIME CONTACT	6.5A			
48.	AIR CONDITIONING PANEL ILLUMINATION	8.5G	148.	IDLESPEED REGULATOR	8.5A			
49.	REAR DEFOGGER SWITCH ILLUMINATION	9E	149.	THERMAL THROTTLE ENRICHMENT	10B			
53.	AIR CONDITIONING PANEL ILLUMINATION RELAY	8.5G	150.	THROTTLE ENRICHMENT MICRO SWITCH	9.5B			
54.	RESISTOR	8G	151.	IDLESPEED REGULATOR MICRO SWITCH	8B			
55.	REAR DEFOGGER TIMER RELAY	8.5I	152.	IDLESPEED REGULATOR MICRO SWITCH	8B			
56.	IGNITION RESISTOR	10G	160.	ENGINE DIAGNOSTIC PLUG	10.5A			
57.	IN-LINE FUSE	6.5I	170.	AUTO TRANSMISSION UNIT	4.5A			
60.	DI/HAZARD FLASHER UNIT	5H	171.	KICK DOWN MICRO SWITCH	6.5B			
62.	PARKBRAKE SWITCH	2E	173.	MANUAL TRANSMISSION UNIT	4.5A			
63.	BRAKE FLUID LEVEL SWITCH	2E	174.	REVERSE LIGHT SWITCH	4A			
64.	SEAT BELT SWITCH	6C	179.	FUEL PUMP	8.5E.			
65.	INERTIA SWITCH	7.5D	180.	FUEL TANK SENDER UNIT	3.5E			
70.	MAIN LIGHTING SWITCH	5G	181.	OIL WARNING LAMP SENDER	4E			
71.	DI/DIP/HORN PUSH SWITCH	4.5H	182.	OIL PRESSURE GAUGE SENDER	3.5E			
72.	HAZARD SWITCH	6H	183.	TEMPERATURE GAUGE SENDER	1.5D			
73.	REAR DEFOGGER SWITCH	9F	185.	SERVICE INTERVAL COUNTER	3.5E			

COLOR CODE

B	BLACK	P	PURPLE
G	GREEN	R	RED
K	PINK	S	SLATE
LG	LIGHT GREEN	U	BLUE
N	BROWN	W	WHITE
O	ORANGE	Y	YELLOW

● P C B CONNECTOR - 16 WAY

⊗ P C B CONNECTOR - 12 WAY

⊕ SPLICE

⊖ CONNECTOR

SYMBOL KEY AND LOCATION LEGEND